INTRODUCTION

Thank you for your purchase of this MP3 player. Now you can carry your music around in this MP3.

MP3 player features

Your MP3 player has the following features:

- Stores up to 500 songs
- Plays MP3 and WMA files
- Transfers music from your computer over a USB cable
- Simple Play/Pause, Next Song and Previous Song buttons
- Built-in rechargeable battery

Computer system requirements

- Operating System: Microsoft Windows 2000/XP/Vista/7
- USB port
- CD/DVD drive, if you want to transfer music from CD

PRODUCT SUPPORT

There is a dedicated help line for this product if you have problems. For help and advice ring:

UK 0207 704 2598 SPAIN 902 023 951

Please have your receipt ready when you call. You can also contact us via email: **support@ingodevices.com** or visit us at **http://www.ingodevices.com**

CHARGING YOUR PLAYER

Make sure the battery is fully charged before using your player, this takes about 7-8 hours. Recharge the player when the battery is low or when the player shuts down. Charging times will vary depending on the amount of residual charge in the battery.

To charge the battery

Connect the MP3 player to your computer using the supplied USB cable. Your player is installed automatically when it is connected for the first time. When it is fully charged, disconnect the player from your computer.

PLAYER OVERVIEW

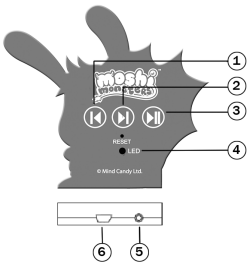

① Previous/VOL-
② ON/OFF/Play/Pause
③ Next/VOL+
④ LED
⑤ Earphone jack
⑥ USB

SWITCHING YOUR PLAYER ON AND OFF

Allow the player to fully charge before switching it on. To switch your player on of off, hold down the ⏯ button.

PLAYING MUSIC

Connect the earphones to the player and switch your player on.

To start playing music

Press the ⏯ button.

To select a different song

Press the ⏭ button to play the next song or press the ⏮ button to play the previous song.

To pause and resume listening to a song

Press the ⏯ button to pause and press the ⏯ button again to resume.

To change the volume

Hold down the ⏭ button to increase the volume or hold down the ⏮ button to decrease the volume.

GETTING SONGS ON YOUR PLAYER

To listen to music, you need to upload songs from your computer to your player. To do this you can connect the player to your computer and double-click the player icon in 'My Computer' to open the player window. Open the folder on your computer containing the songs you want to upload and drag them into the player window.

You can also use Windows Media Player to organise your music, copy songs from your CDs and then load these songs onto your MP3 player. Songs that you copy from CDs will be saved in the Library; you can also add more files by telling Windows Media P. to search your computer for music files.

If all your music will fit on the MP3 player, you can transfer automatically. To choose which songs you want from the Library manually, drag the songs that you want onto 'Drag items here' and click the Start Sync button to copy the selected songs to the MP3 player.

IMPORTANT: If files that you copy from CDs do not play on your player, make sure that copy protection (Digital Rights Management) is not enabled. To check this go to **Tools** > **Options** > **Rip Music** tab. Make sure the **Copy protect music** check box is not selected.

Windows and Windows Media are either registered trademarks or trademarks of Microsoft Corporation in the U.S.A. and/or other countries.

CAUTION

At full volume, prolonged listening of portable music player may damage user's hearing.

DISPOSAL

Electrical and electronic equipment (EEE) contains materials, parts and substances which can be dangerous to the environment and harmful to human health if waste of electrical and electronic equipment (WEEE) is not disposed of correctly.

Equipment, which is marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department as they will be able to provide details of the recycling options available in your area.

Used batteries are hazardous waste and NOT to be disposed of with the household waste! As a consumer you are legally obligated to return all batteries for environmentally responsible recycling – no matter whether or not the batteries contain harmful substances*).

Return batteries free of charge to public collection points in your community or to shops selling batteries of the respective kind.

Only return fully discharged batteries.

• Rechargeable batteries should be charged under adult supervision.

• The supply terminals are not to be short-circuited.

• Used batteries are hazardous waste and NOT to be disposed of the household waste!!! Return the batteries to your dealer or to collection points in your community.

• Keep batteries away from children. Children might swallow batteries.

Contact a physician immediately if a battery was swallowed.

• Check your batteries regularly to avoid battery leakage.

• Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

• CAUTION: Danger of explosion if battery is incorrectly replaced

Ingo Devices assumes no responsibility for any errors that may appear in this manual.

Due to our continuous improvement, Ingo Devices reserves the right to change without notice, product offerings, specifications and compatibility.

www.ingodevices.com